


Introduction

We are considered to be one of the most professional and leading Manufacturers / Exporters / Suppliers of all types of Calibrators in India in the field of Mechanical , Thermal , Electro-Technical , Optical etc. We have well experience and knowledge in manufacturing of Calibrators in all disciplines.

Product Description

Range : 1,000mm. , Resolution - 0.001mm. (1 μ m.)

EN-STCAL has been specifically designed to Calibrate all types of Measuring Tapes , Precision Measuring Scales & Steel Rules etc. Economical but being accurate for the purpose made it very popular amongst the Laboratories , Industries & Manufacturers.

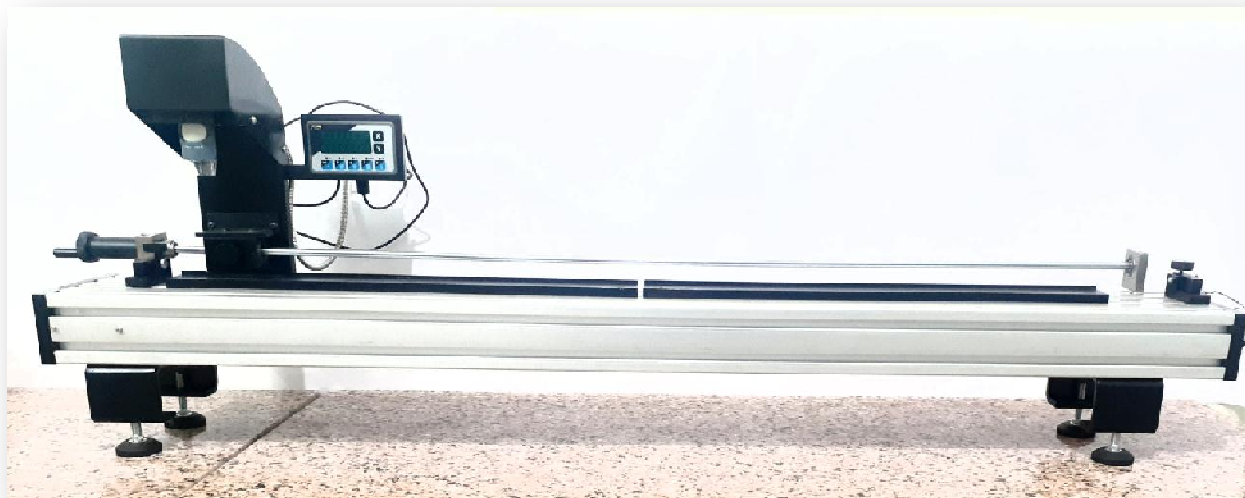

Technical Specifications

Model No.	EN-STCAL
Range	1,000mm.
Resolution	0.001mm. (1 μ m.)
Magnification	(8X - 50X)
Drawer Load	(20N & 50N) \pm 10%

All product specifications are subject to change without prior notice.



Features

- ▶ Robust Construction With Single Piece Aluminium Anodised Profile Body.
- ▶ S. S. Guiding & Bearing.
- ▶ Plated Block For The Self Allignment Of Scale & Tape.
- ▶ S. S. - 316 / V - Shaped Guide For Scale Movements.
- ▶ Glass Scale To Avoid Frictional Error.
- ▶ Two Sided Clamp To Avoid Disturbance For Proper Allignment.
- ▶ Compact DRO With Scale Make Electronica.
- ▶ Celestron Capture Pro Digital Microscope.
- ▶ Zoom Lens With Cross Line SOFTWARE CD.

Applications

Useful for the Testing and Calibration of all types of Measuring Tapes , Precision Measuring Scales & Steel Rules etc.

Note

Laptop / Computer to be Procured locally by you to your A/C.

All product specifications are subject to change without prior notice.